



¹
Aspera R7

User Manual

Contents

Safety Information.....	3
Appearance and Key Function.....	5
Introduction.....	6
Call Functions.....	7
Notifications Bar.....	8
Contacts.....	9
Messaging.....	9
Bluetooth and Wi-Fi.....	10
Audio Setting.....	11
Internet.....	12
Play Store.....	12
Camera.....	13
Gallery.....	14
Music.....	14
FM radio.....	15
Sound Recorder.....	15
Calendar.....	16
Alarm Clock.....	17
Settings.....	17
GPS and Maps.....	18
Backup and Reset.....	18
Maintenance and service.....	19

Safety Information

Please carefully read the terms below:

Usage Safety

Do not use the phone in situations where it might cause danger.

Transportation Safety

Please observe all transportation laws regarding mobile phone usage.

Please drive with both hands on the wheel.

PLEASE DRIVE RESPONSIBLY-DO NOT TEXT AND DRIVE.

Hospital Safety

Please follow hospital rules and regulations.

Please turn off your mobile phone when near medical instruments.

Airport Safety

Remember to follow all airport and flight safety regulations.

Please do not use your phone during flight unless in Airplane mode.

Chemical Warning

Do not use your mobile phone around fuels and chemicals.

Temperature Warning

Do not subject your phone to extreme temperature conditions.

Emergency Calls

Make sure your mobile phone is switched on and in a cellular serviced area.

From the home screen, tap the phone key and go to the dialer screen and dial the emergency number.

Accessories and Batteries

Use only Aspera mobile batteries and accessories.

Information Backup

Remember to keep a written record of all important information.

Battery Safety and Precautions

-For better performance and longer battery life, it is recommended that you charge the battery fully before using the mobile phone for the first time.

-The optimum performance of a new battery is typically achieved after two or three complete charge cycles

Note: Keep in mind that continuous overcharging will affect long term battery life.

-While charging, keep the mobile phone out of reach of small children.

-Store the battery in a cool and dry place away from sunlight and water.

- Do not expose battery to extreme temperatures (below-8°C (18°F) or above 43°C (110°F)).

-Immediately stop using the battery if it produces an odour, crack and leaks, overheats, distorts or has any other type of physical damage.

-Avoid using the charger near or around liquids. If the charger comes in contact with water or any liquids immediately unplug it from the outlet to reduce the risk of overheating, charger malfunction, electric shock or fire.

Warning: Please be careful with the disposal of used batteries. Do not throw away the batteries with daily waste. Please follow local environment laws and guidelines for proper waste disposal.

Appearance and Key Function



Introduction

Installation of the Micro SIM card

Advisory: Please keep the SIM card out of the reach of small children. The SIMcard and its contacts are easily damaged due to scratching or bending. Please use caution when carrying, installing or taking out the SIM card,

To insert SIM card:

1. Lift the seal on the left side of the phone. Insert the Micro SIM card with the connectors facing up towards the screen with the SIM's angled corner entered first. Ensure the seal is replaced correctly.
2. The user can insert an SD card by lifting the seal on the right side of the phone (for additional storage capacity). The connectors of the card should face upward. Ensure the seal is replaced correctly.



Power On and Off

Turn On-Please ensure the SIM card has been properly inserted into the phone.

Press down and hold the Power key to switch on the phone.

Turn Off- Hold down the Power key until an options menu appears. Select Power Off in the menu and confirm in the pop-up prompt to switch off the phone.

Security

To change security settings, tap on the Settings icon then scroll down and tap Security. This will provide options for password locks, password changes, and other security functions.


Call Functions

Select the phone icon. At the dialer keyboard, enter the phone number and then click the dial key. You can select a Contact to call by tapping Contacts and scrolling down and tapping the required Contact.

A contact can be added to Speed dial by clicking the star above their name.

Call logs:

Every telephone number called and received will be saved in the phones call log. All the numbers in the call log can be dialed directly by clicking the dial icon on the screen and selecting the contact.

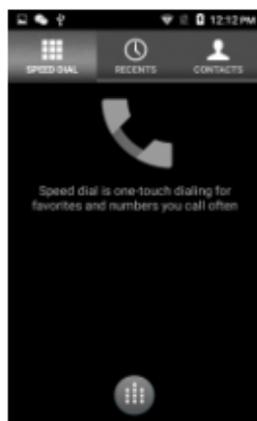


Notifications Bar

The notification bar is located on the top of the screen and displays notifications for a range of services, such as messages, email and applications that are installed. Scroll downwards from top of the screen to get an expanded notification bar.


All notifications from applications will appear here as well as hardware notifications such as connection of the USB.

At the top of the screen the “shortcuts” tab can also be selected. This will provide you quick access to common settings allowing the user to turn on/off a particular setting. Simply tap on Shortcuts at the top right of the screen once you have scrolled down the notifications bar.

You can also get notifications to appear on your lock screen. The default settings have to be changed in order for this to occur. Go to settings->sound and notification->notification->” when device is locked” and then select show all notification content.

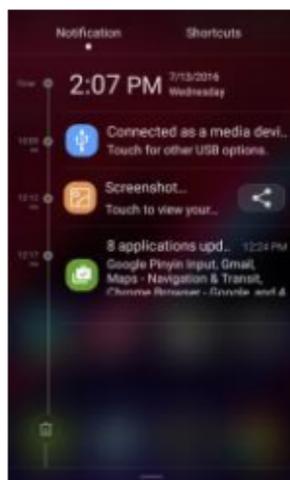

8

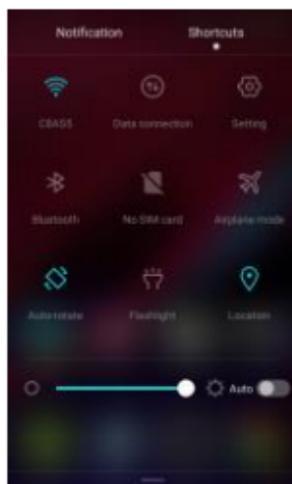

Contacts

Click on the Contacts icon. Tapping the 3 vertical dots at top right will show a menu with all the Contact options such as importing from sim card and choosing which contacts to display.

To edit a contact, click on the name then select the pen at top of the screen.

The default display is the phone contacts, the contacts are listed alphabetically by default.

Select any contact and the dialing and messaging options will be shown.


To add a contact, click on the small blue person icon and fill in contact details accordingly.

Messaging


You will find the Messaging icon at the bottom of the screen, click the message icon to edit your text and send to the desired contact.

To add an image, contact V-card or audio file to a message simply click the green plus symbol at the start of the text message and you will be prompted to select what you wish to be added.

To delete a text message, press down on the message until the phone notifies you that message has been selected. Then click the bin icon in the top left to delete the message.

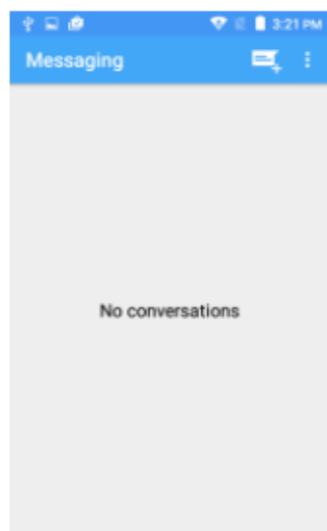

9

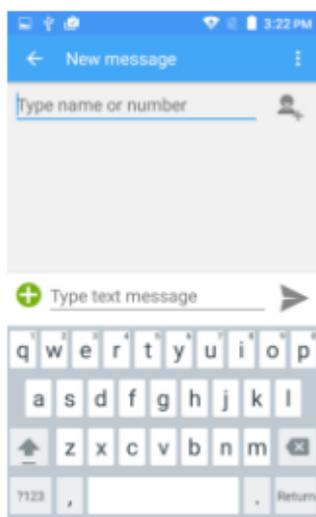

Power on Bluetooth:

Tap the Settings icon and scroll down and tap Bluetooth, then toggle right to turn on Bluetooth.



The Bluetooth icon will appear in the notification bar, then it will start to scan for all devices within its range and will display all available devices in a list. You can then tap on the device you wish to connect with.

Alternatively swipe down from top of the screen and select the short cuts tab. From here, press the Bluetooth icon to turn it on.

Power on Wi-Fi:

Tap the Settings icon and then tap Wi-Fi and select ON to power on Wi-Fi. Click on the desired Wi-Fi network to be connected. You may be asked to enter the password of that Wi-Fi network.

Alternatively swipe down from top of screen and select the short cuts tab. From here, press the wife icon to turn it on.

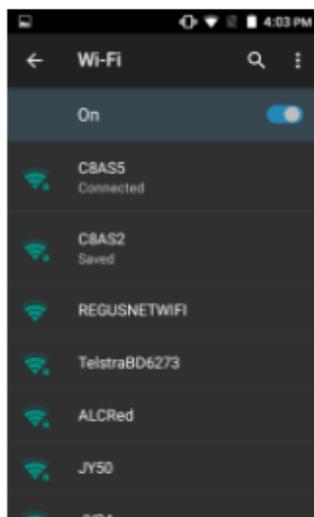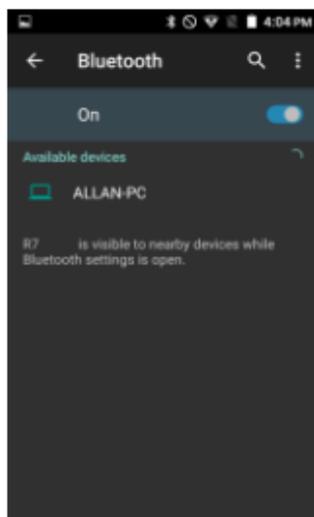

Tethering and Wi-Fi Hotspot

To set up a wireless hotspot go to **settings->more->tethering and portable hotspots->Wi-Fi-Hotspot** and then turn on and then select “turn on a wireless hotspot.”

For tethering go to **settings->more->tethering and portable hotspot**. At this point you may either turn on Bluetooth tethering or USB tethering.


Note: USB tethering can only be turned on when the USB is connected.

Audio Setting

To switch to silent mode, go to **settings->sound and notification->silent mode**.

To change ringtone, go to **settings->sound & notification**. Click on the small settings icon next to general. Then go to “phone ringtone” and you will be presented with a list of options to which you can change your ringtone to.


In this section the notification sound can also be modified, select “default notification sound” and select your preferred sound.

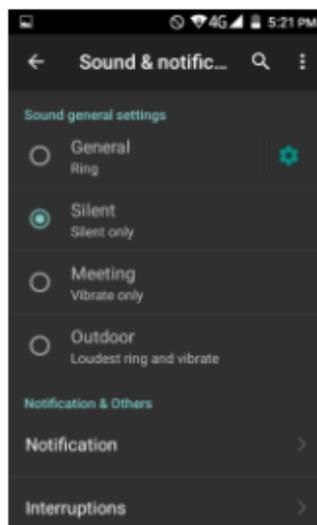

Internet


Google Chrome is installed on the phone as the default browser. Before you start browsing, ensure that you are connected to the internet.

Once you are connected click on the Chrome icon to begin browsing.

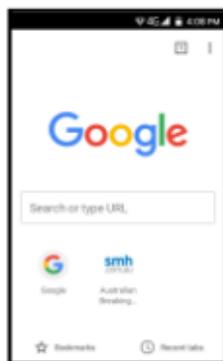

Play Store

To begin browsing the Play Store login with an existing Gmail account or create a new account. Google play allows you to download music, applications, and games directly to your device. To access the Google Play Store, click on the Play Store icon. You must be connected to the internet.

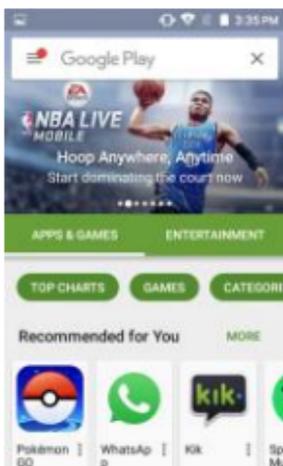

Camera

Open Camera: To open the camera click on the camera icon.

Taking pictures: Aim the camera at object you wish to capture. Tapping on a particular region of the screen will focus the camera on that region.

Deleting Pictures: To delete a picture, select a picture and tap on the 3 vertical dots in top left of the screen. An expanded list of options will come up, select the delete option to delete the picture.

At the bottom of the screen you can slide across to select to capture video.

Other Features: The Aspera R7 camera allows for various filters and borders to be added to a photo. To access these effects, select a photo and click on the pencil icon on the bottom left.




Gallery

Open images: Click on the Gallery icon. This is the default location for pictures taken by the phone.

Pictures are stored in separate albums. There will be a separate album for screen shots.

Screenshots can be taken by simultaneously pushing the on/off button and volume down key.

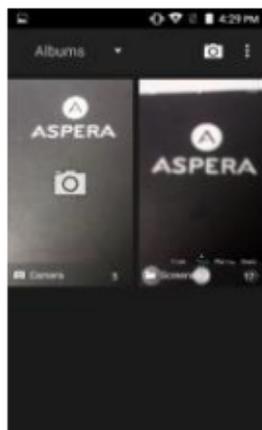

Music

Open Music: Tap on the Music icon

Music is sorted by different files such as Artists, Albums, Songs, Playlists.

Choose one of the songs to play it. You can also create Playlists by tapping on the menu at top right of the screen.




FM radio

The FM radio uses the wired headphones as an antenna in order to receive a signal. Before using this function, connect headphones/earphones to the headphone port located at the top of the device.

Open FM radio: Press the FM radio icon to open the application;
Click the 3 vertical dots at top right of screen, then click Search to scan FM Channels automatically. Click the arrow at bottom right of the screen to see all channels.

Click the headphone icon at top of the screen to play through the loudspeaker

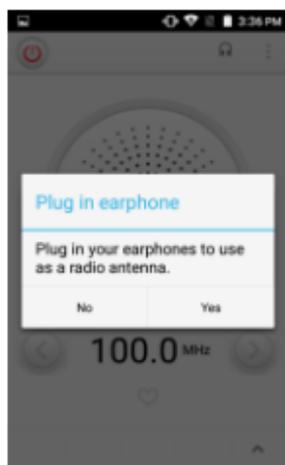

Sound Recorder


Open Sound Recorder: Click on the Sound Recorder icon to open the application.

Recording:

Keep the phone's microphone near the sound source;


Click the record button to record the audio.

Click the stop button to stop recording the audio.

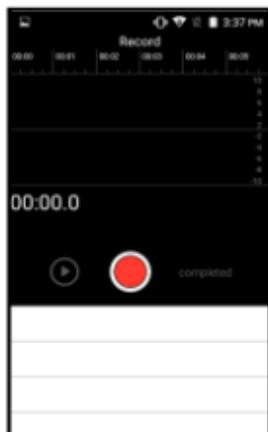


Calendar

The calendar helps keep track of your life's most important moments in one application. Click on any date to add an event at the appropriate time. Clicking on the time will bring up a text box where you can add the details of the event

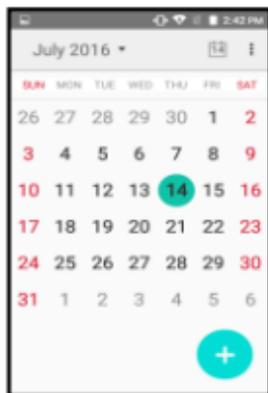


Alarm Clock

Click on the Clock icon then click the alarm icon at top left. Tap on the “+” icon to add a new alarm. You can toggle on or off any alarm in this screen by tapping on the toggle button on the right.

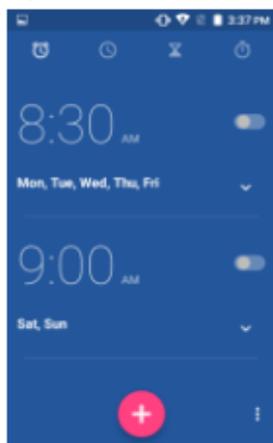

Settings

Open Settings by tapping on the Settings icon. Click any functions you want to modify. Note many common settings can be quickly turned on/off in “shortcuts” tab. Access shortcuts by swiping downward from top of screen.

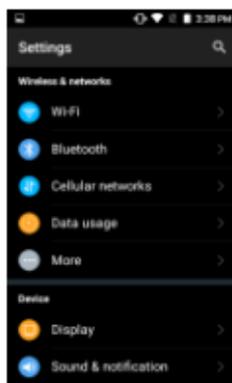



GPS and Maps

The R7 also comes with GPS. To use the GPS first turn on the location services. To do this swipe down from top of the screen and then go to the shortcuts tab.

In the shortcuts tabs, select “location.” The location icon will go blue to indicate that it has been turned on.


After this is done go to the google maps icon in menu and use the map functions you desire.

Note: Google maps is the default maps option in android devices.

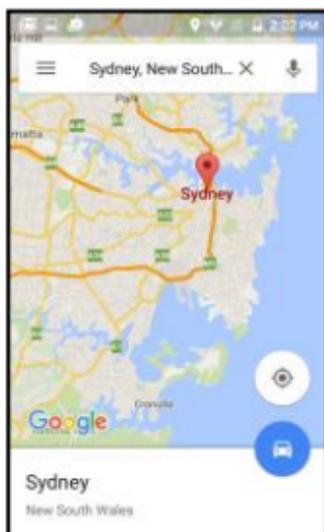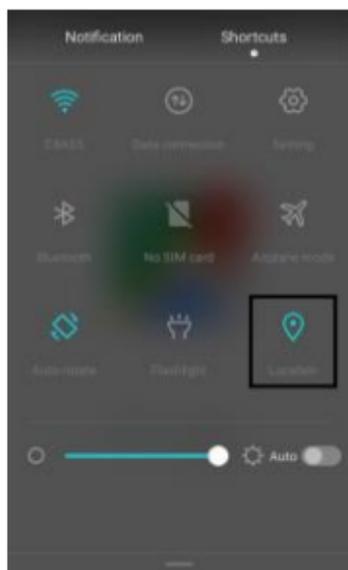

Backup and Reset

To perform a factory reset on the R7, go to settings->backup and reset-> factory data reset. **MAKE SURE TO BACK UP ALL IMPORTANT DATA BEFORE THE RESET.** Make sure you have the “back up my data” setting turned on.

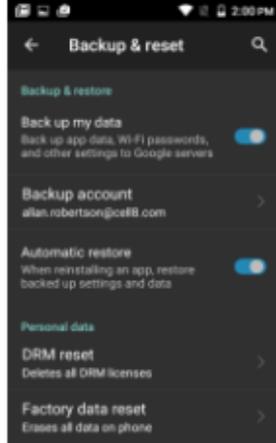

Maintenance and service

Your Aspera R7 is a product with intricate design and functionality. Please use carefully. Following are some suggestions for you to effectively maintain the quality of your Aspera mobile.

1. Keep the mobile dry. Rainwater, moisture and other liquids may contain mineral matters, which may erode the electronic wires if seals are not closed correctly.
2. Don't store the mobile in dusty or gritty places; the moving parts and electronic elements may be damaged.
3. Don't put the mobile in areas subjected to extreme heat.
4. Don't keep the mobile in extreme cold temperatures. This may lead to moisture being generated within the mobile once the phone is removed from cold areas, resulting in damage of the circuit board.
5. Please open the mobile seals as per the descriptions in the manual. Don't try any other means.
6. Don't deliberately throw, knock or shake the mobile. Any rough treatment of the mobile may result in damage of the inner circuit board and its structure.

7. Don't clean the mobile with ardent chemical, detergent or strong wash.
8. Don't paint any dye on the mobile. Painting may affect the normal operation.
9. Clean the lens with clean, dry soft cloth (such as the camera lens, distance sensor and light sensor).
10. Please use the charger in indoor areas only.

The above suggestions apply to your mobile, battery, charger and other accessories. If any device doesn't work, please take it to the nearest authorized maintenance agency for repairing, or contact Aspera Mobile on info@asperamobile.com or 1300 656456 or from overseas +61435463060



