



Aspera R25t User Manual



Contents

Safety Information	3
Product Appearance, Buttons and Key Description ...	6
Battery.....	7
Power on and off	8
Unlocking the Phone	9
File Manager	9
Phonebook and Contacts	9
Messaging.....	9

Fun and Games	10
Calling Functions and Call Center.....	10
Camera	10
FM radio	10
Music.....	11
Alarm Clock and Calendar	11
Settings	11
User Profiles.....	12
Phone Shortcuts.....	12
Extras (Calculator and Stopwatch).....	13
Services and Internet	13
Changing Ringtone	14
Trouble Shooting.....	15
Maintenance and service	15

Safety Information

Please carefully read the terms below:

Usage Safety

Do not use the phone in situations where it might cause danger.

Transportation Safety

Please observe all transportation laws or regulations.

Please drive with both hands on the wheel.

PLEASE DRIVE RESPONSIBLY-DO NOT TEXT AND DRIVE.

Hospital Safety

Please follow hospital rules and regulations.

Please turn off your mobile phone when near medical instruments.

Airport Safety

Remember to follow all airport and flight safety regulations.

Please do not use your phone during flight.

Chemical Warning

Do not use your mobile phone around fuels and chemicals.

Temperature Warning

Do not subject your phone to extreme temperature conditions.

Emergency Calls

Make sure your mobile phone is switched on and in a cellular serviced area.

From the home screen, tap the phone key and go to the dialler screen and dial the emergency number.

Accessories and Batteries

Use only Aspera mobile batteries and accessories.

Information Backup

Remember to keep a written record of all important information.

Battery Safety and Precautions

-For better performance and longer battery life, it is recommended that you

charge the battery fully before using the mobile phone for the first time.

-The optimum performance of a new battery is typically achieved after two

or three complete charge cycles

Note: Keep in mind that continuous overcharging will affect long term battery life.

-While charging, keep the mobile phone out of reach from children.

-Store the battery in a cool and dry place away from sunlight and water.

-Do not expose batteries to extreme temperatures (below -8°C (18°F) or above 43°C (110°F)). -

Immediately stop using the battery if it produces an odour, crack and leaks,

overheats, distorts or has any other type of physical damage.

-Avoid using the charger near or around liquids. If the charger comes in

contact with water or any liquids immediately unplug it from the outlet to reduce the risk of overheating, charger malfunction, electric shock or fire.

Warning: Please be careful with the disposal of used batteries. Do not

throw away the batteries with daily waste. Please follow local environment

laws and guidelines for proper waste disposal.

Repairs

Only qualified personnel may install or repair this product.

Enhancements and Batteries

Use only appropriate enhancements and batteries. Do not connect incompatible products.

Water Resistance

Your phone is water resistant when sealed correctly. IP 67 is totally dust proof and can be left in non-corrosive liquids for up to 30 minutes at 1 metre.

Product Appearance, Buttons and Key Description



Battery

Open the back cover: First, rotate battery cover lock screws to the left (anti-clockwise) until cover is loosened. Remove back cover and then remove battery.



2. To install the sim. Put the SIM card and Micro-SD Card, if you have one, chip-sides facing down into corresponding card slots, and lock them properly.



Please ensure battery cover, battery cover lock screw, screw hole rubber plugs, earphone and USB rubber plugs are perfectly closed to prevent water and dust from entering.

Note: Please turn off the mobile phone and disconnect the battery charger from the phone prior to installing / uninstalling the SIM card.

Power on and off

To turn on or turn off the device press and hold on to the red hang up key.

Unlocking the Phone

Press the flashlight button on the top left corner and then press the “*” button in the bottom left corner. Your phone will give you a prompt after pressing the flashlight button.

To lock the phone, press the hang up button.

File Manager

To access the file manager, go to menu->file manager. This will show you how much storage you have left. If an SD card is inserted the storage details of the SD card will also be shown.

Phonebook and Contacts

To access the phonebook, go to menu->phonebook.

To add a contact, go top of your contacts and select the option “add new contact” then add in all necessary information.

To delete a contact, select the contact to be deleted. Press the left soft key and go scroll down to delete.

Messaging

To send a message, go to menu->phonebook. Go down to contact you wish to send the message to. Press the left soft key which will give you a list of options to do with selected contact and scroll down to send message.

Alternatively, press the right direction key to bring up a messaging environment. Write your message and then press the middle button and select which contact you want to send the message to.

Note: You can press the “#” to change input methods (from numbers to letters and vice versa).

You can view the received SMS in the Inbox.

You can view saved drafts in the draft box.

You can view sent and saved, failed to send and saved after editing SMS’ in the Outbox.

You can view sent SMS in the Sent box.

Fun and Games

To play game on your device select menu->fun and games.

Calling Functions and Call Centre

To change call settings or check on you call log, go to menu->call centre. Here you can view all your previous calls in the call history.

Camera

To access the camera, press the black button on the left hand side of the Aspera mobile.

Or go to menu->multimedia->camera.

To browse through taken photos, go to image viewer in multimedia.

To make changes to photos, select a photo, click on the left soft key to bring up a list of options. Here you can choose to edit and delete the photos amongst a number of other options.

FM radio

To access the FM radio, click on the FM button which lies right below the right soft key.

Note: Earphones **must** be plugged in for the FM radio to work.

Alternatively, go to menu->multimedia->FM radio.

Use the direction keys to change channels.

Press the direction key to turn the radio on or off.

Press the middle button to start recording off the radio and Press left soft key when finished.

Music

To access music on the phone, go to multimedia->media player->my songs.

Alarm Clock and Calendar

To access the alarm clock and calendar go to menu -> organiser->alarm.

To set the alarm, scroll down to alarm and write down the time you want to go off (in 24-hour time). Alternatively, pressing the down direction key will take you directly to the set alarm interface.

To access the calendar, go to menu->organiser>calendar. You can add events to the calendar by clicking on a chosen date, then pressing add.

Settings

Phone Settings: Here we can change time and date, language amongst other settings.

Factory Reset: A factory reset will return your phone to default settings and in the process wipe out all data on the phone.

To perform a factory reset on the R25, go to settings>restore factory settings. You will need to input a phone password for the reset process to begin.

Security Settings: To access security settings->security settings. Here you can add a pin for your sim, add a phone lock password and turn on/off auto keypad lock.

User Profiles

To set the phone to silent go to setting->user profiles>set phone too silent.

Alternatively, while on the home screen press the left direction key; this will take you to user profiles directly.

In User Profiles you can change the phone modes too silent, general, meeting, outdoor or a style of your choice.

Phone Shortcuts

The Aspera R25 has some quick shortcuts that can be achieved by a single press of the direction keys.

Left direction key: Takes you directly to user profiles which allows you change to silent mode.

Right direction key: Takes you directly to a messaging interface.

Dow direction key: Takes you directly to the alarm setting interface.

Up direction key: Takes you directly to the media player.

Other shortcuts to important features of the phone can be achieved by going to menu->shortcuts. Provided will be a list of options to applications within the phone.

Extras (Calculator and Stopwatch)

Other extra features can be accessed by going to menu>extras. In this section you can access the calculator, Unit converter and the stopwatch.

For the calculator, use 1-9 keys to input the number that needs to be calculated and “#” key to input decimal point; Press right soft button to clear last input step-by-step or to clear results; Press OK button to get the results.

The unit converter can convert weight (kg to pounds and vice versa) and length (km to miles and vice versa).

Services and Internet

You can browse the internet on the Aspera R12 using your provider’s mobile data. Go to menu->services>internet service.

Note: This phone is not Wi-Fi compatible and as such will not be using your Wi-Fi network. To search for a website on the browser, type in the input and press the middle button to confirm your search.

Use the directional keys to go over certain regions of the website.

Changing Ringtone

To change the ringtone, press the left directional key which will take you to a “user profile” page. Select general and press on options (by pressing left soft key).

Go down to incoming call, select it and then go to change.

This will give you options of ringtones which you can use.

Fault	Possible Causes
-------	-----------------

Doesn't start up	The battery may be out of charge. Please charge your device. The battery may not be installed properly. Please recheck.
SIM card doesn't work	Clean SIM card if it's dirty. Reinstall SIM card. Exchange the SIM card if it's damaged. Sim Card Holder might be damaged
Poor signal	Check the signal strength indicator on the display screen.
Can't use phone to call	1.You may have set "conceal own number", but your network operator doesn't provide this service 2.Strong signal interference exists in the surrounding environment.
The battery can't be charged	The battery is completely discharged, in which case the battery charges only after being connected with the charger for some time.

Trouble Shooting Maintenance and service

Your Aspera R25 is a product with intricate design and functionality. Please use carefully. Following are some suggestions for you to effectively maintain the quality of your Aspera mobile.

1. Keep the mobile dry. Rainwater, moisture and other liquids may contain mineral matters, which may erode the electronic wires.

2. Don't use or store the mobile in dusty or filthy places; the detachable parts and electronic elements may be damaged.
3. Don't put the mobile in overheated places.
4. Don't keep the mobile in cooled places. This may lead moisture being generated within the mobile once the phone is removed from cooled areas, resulting in damage of the circuit board.
5. Please open the mobile as per the descriptions in the manual. Don't try any other means.
6. Don't throw, knock or shake the mobile. Any rough treatment of the mobile may result in damage of the inner circuit board and its structure.
7. Don't clean the mobile with ardent chemical, detergent or strong wash.
8. Don't paint any dyestuff on the mobile. Painting may block foreign substances in detached parts and thus affect the normal operation.
9. Clean the lens with clean, dry soft cloth (such as the camera lens, distance sensor and light sensor).

10. Only use matched or approved antenna for substitution of the damaged one. Unapproved antenna, alteration or accessories may result in damage of the mobile.
11. Please use the charger in indoor area.
12. Back up data that should be kept (such as the address directory and calendar memorandum).

The above suggestions also apply to your mobile, battery, charger and other accessories. If any device doesn't work, please take it to the nearest authorized maintenance agency for repairing.



